

DOWNPIPE WATER DIVERTER

Product Code: WD-90-PVC

Improve water quality and reduce tank maintenance by preventing the first flush of water.

Downpipe First Flush Diverters are installed at each downpipe that supplies water to the tank. They utilise an automatic ball and seat system that does not rely on any mechanical parts or manual intervention. As the water level rises in the diverter chamber, the ball floats, and once the chamber is full, the ball rests on a seat inside the diverter chamber preventing any further water entering the diverter. The subsequent flow of water is then automatically directed along the pipe system to the tank.

- Prevents sediment, bird droppings, spiders, insects, mosquito eggs and debris from entering the rainwater tank
- Improves water quality, protects pumps and internal appliances
- Easy installation, just add pipe and glue
- No mechanical parts
- Low maintenance requirements

SPECIFICATIONS

Code

WD-90-PVC



